

Ateco

• Plastic-coated, cloth pastry bags



2321 •
Pastry Bag
21" (cd)



2318 •
Pastry Bag
18" (cd)



2316 •
Pastry Bag
16" (cd)



2314 •
Pastry Bag
14" (cd)



2312 •
Pastry Bag
12" (cd)



2310 •
Pastry Bag
10" (cd)

- More pliable and flexible for better handling
- Use with hot or cold foods
- Available in 12" and 18" sizes



4605 •
Soft Disposable Bags,
12" (pk/10)

4685 •
Soft Disposable Bags
18" (pk/10)

- Convenient and easy to use - simply cut the end of the bag, insert desired decorating tip, fill and squeeze
- Strong – won't stretch or balloon out
- Non-slip for easy grip and effortless use
- Disposable for quick and easy cleanup



47712 •
Disposable Pastry Bags
PL, 12" (bx/100)

- Set contains:
3 plastic decorating tubes and 15-12" disposable decorating bags



6331 •
Cake & Food
Decorating Set (cd)

- Perfect for coloring cookies in a variety of colors and designs
- Also great for decorating fondant for cakes and cupcakes



NEW

4963 •
Food Coloring Marker Set
Medium Writing Tip (cd/8)



NEW

1496 •
Food Coloring Marker Set
Fine Writing Tip (cd/10)