



E. SOHO DISPLAY CASE

Includes 3 Black Trays.

Self and Attendant Serve with 3 Tray Positions.

ITEM 1574-13 | 17¼Wx12¾Dx20¼H | 10x14 Trays

ITEM 1575-13 | 21¼Wx15¾Dx20¼H | 13x18 Trays

REPLACEMENT TRAYS

ITEM 335-10-13 | Replacement 10x14 Tray

ITEM 325-13-13 | Replacement 13x18 Tray

Featuring a reversible design
for self or attendant serve!
Featuring 3 different tray
positions: tilted front, tilted
back, and level.



F. MADERA paneled BAKERY CASE

Includes 3 – 13" x 18" Clear Trays.

ITEM 3621-99 | 25Wx17Dx23H

ITEM 325-13-12 | Replacement Tray



G. ASPEN paneled BAKERY CASE

Includes 3 - 13x18 Clear Trays

ITEM 3621-110 | 25Wx17Dx23H

ITEM 325-13-12 | Replacement Tray



H. ASHWOOD CASE DISPLAY

Includes 3 Clear Acrylic Trays.

Self and Attendant Serve with 3 Tray Positions.

ITEM 3838-83 | 20Wx14¾Dx20½H

ITEM 325-13-12 | Replacement Tray

Featuring a reversible design
for self or attendant serve!
Featuring 3 different tray
positions: tilted front, tilted back,
and level.