

8 1077 01

L = 65 cm . B = 48 cm
L = 25½" . W = 19"



TEXTIL-ROLLTASCHE, 12-TEILIG, WASCHBAR, OHNE BESTÜCKUNG TEXTILE ROLL BAG, 12 PIECES, WASHABLE, EMPTY .
TROUSSE ENROULABLE EN TEXTILE, 12 PIÈCES, LAVABLE, VIDE . CUSTODIA AVVOLGIBILE DI TESSUTO, LAVABILE, 12 PEZZI,
VUOTO . BOLSA ENROLLABLE DE TELA, 12 PIEZAS, LAVABLE, VACÍO

8 1076 01

L = 50 cm . B = 43 cm
L = 19½" . W = 17"



TEXTIL-ROLLTASCHE, 7-TEILIG, WASCHBAR, OHNE BESTÜCKUNG TEXTILE ROLL BAG, 7 PIECES,
WASHABLE, EMPTY . TROUSSE ENROULABLE EN TEXTILE, 7 PIÈCES, LAVABLE, VIDE . CUSTODIA AVVOLGIBILE
DI TESSUTO, LAVABILE, 7 PEZZI, VUOTO . BOLSA ENROLLABLE DE TELA, 7 PIEZAS, LAVABLE, VACÍO

8 1062 01

L = 34 cm . B = 26 cm
L = 13½" . W = 10"



TEXTIL-ROLLTASCHE FÜR GARNIERWERKZEUGE, 8-TEILIG, OHNE BESTÜCKUNG TEXTILE ROLL BAG FOR GARNISHING TOOLS, 8
PIECES, EMPTY . TROUSSE ENROULABLE EN TEXTILE POUR DES OUTILS À DÉCORER, 8 PIÈCES, VIDE . CUSTODIA AVVOLGIBILE
PER ATTREZZI PER GUARNITURA, 8 PEZZI, VUOTO . BOLSA DE TELA PARA DE UTENSILIOS PARA DECORAR, 8 PIEZAS, VACÍO